


# Emergency Personal Water Filter Roll Up

[www.Emergency-H2O.com](http://www.Emergency-H2O.com)


**PLEASE REGISTER YOUR PRODUCT AT:**

<http://www.emergency-h2o.com/Product-Registration.html>

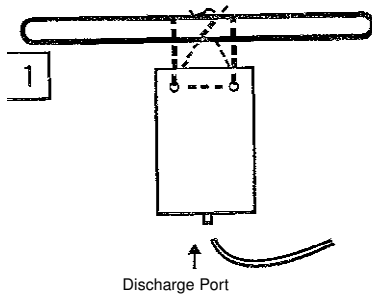

## OPERATIONAL INSTRUCTIONS:


Suspend your Personal Water Filter Roll-up from a limb, branch, or pole and push on the 2-foot nylon tube to filter discharge port for controlled clean filtered water discharge. The nylon tube has a thumb clamp attached to help you control water flow during filtration.

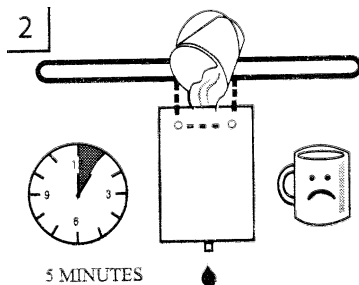


When using the water filter rollup for the 1<sup>st</sup> time.

Pour up to 3 gallons of rain, stream, river or lake water to be filtered in the upper plastic chamber. After the clean water starts to drain out discharge tube, please allow up-to 5 minutes to pass and then throw away the collected water. This will get rid of any loose carbon flakes that may have dislodged from the filter.

**(This is only necessary the first time that the filter is used.)**

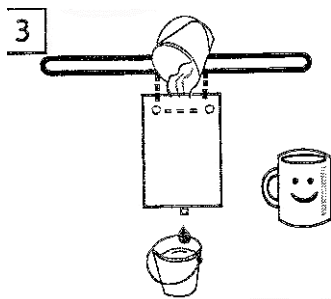

Keeping the bag full will increase the rate of water flow out the bottom of the discharge tube.

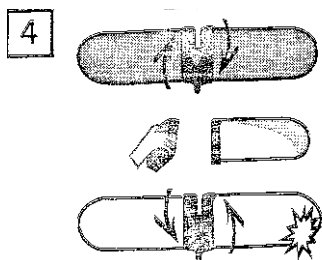

When putting the filter away for storage after use, please use 4 drops of regular Clorox bleach in 2-3 gallons of clean water and let it run through the filter to help sanitize the inside and outside of your filter. If the filter is dirty, use the enclosed 3M pad and lightly scour the outside of the ceramic filter. Rinse with clean water. Allow filter to dry completely before being put back together and be stored. Only take the filter apart if absolutely needed otherwise clean the sock by back flushing and a small amount of soap.

**(Never use hot water and or soap on the ceramic filter itself.)**



Use convenient straps for carrying and hanging (Weights 1.5 lbs Dry)

## ENCLOSED IN BOX:

- 1 - Complete Emergency Personal Water Filter Roll-up
- 1 - 2 foot Vinyl Drip Hose
- 1 - 3 M Cleaning Pad
- 1 - Instruction Sheet
- 1 - Nylon Tubing Thumb Clamp

**ANY QUESTIONS PLEASE E-MAIL:** [Emergency-H2O@aol.com](mailto:Emergency-H2O@aol.com)

Go Online to get latest Instructional Sheet.

Version 1.7